

7506-7508 DeckHand Dimmer

The timed illuminated exit setting allows boaters to safely disembark before the lights automatically turn off.

Using the timed illuminated exit mode

1 minute delay: Hold the switch in up position (bright) for 2 seconds, lights will flash. Release switch after first flash and the lights will remain on for 1 minute.

2-5 minute delay: Hold the switch in up position (bright) for 1-4 seconds after the first flash. Release the switch after 2 to 5 flashes. The lights will remain on for 1 minute for each flash up to a maximum of 5 minutes.

